



SPOKE PLANTER GAUGE WHEEL

Eliminate soil buildup and plugging

Traditional closed gauge wheels tend to plug up with wet soil during planting, and you have to stop and clean them out to get them rolling again. The open-wheel design of the Yetter Spoke Planter Gauge Wheel allows soil to flow through the spokes rather than build up behind the wheel. No plugging means the wheels keep turning and you can cover the acres you need to every day during planting.

6000-070/071 SPOKE PLANTER GAUGE WHEEL FEATURES

- » Models available in 3" x 16" and 4.5" x 16" widths
- » Open-wheel design prevents plugging
- » Durable cast iron hub mounted to steel rims with three bolts per spoke
- » Direct replacement for standard factory OEM gauge wheels
- » Designed for easy installation and access for maintenance
- » Semi-pneumatic rubber wheel
- » Snap ring design for easy bearing replacement



6000-070 Spoke Planter Gauge Wheel – 3" width



6000-071 Spoke Planter Gauge Wheel – 4.5" width