

JD 1790 DOUBLE CROP SOYBEAN SEEDING SYSTEM

Recommendations made here are NOT to be used in No-till cornstalk residue.

Use of Residue Managers in 15" Rows for planting soybeans directly into harvested wheat stubble.

Coulter/Residue Manager Combination - 1790 planter must be equipped with ordering code 5415. Included in code 5415 are long parallel arms, long drive cables, vacuum hoses, seed delivery hoses and down force spacers.

Model No's to Order for each planter configuration		Quantity to order for each planter	
		23/24R (15")	31/32R (15")
2960 UNIT MOUNTED CONSERVATION COULTERS ONLY	2960-032 Universal unit coulter, JD Mell/+/XP		
	2960-034 Coulter w/ U.N.T. bracket (JD-1700)		
	2960-127 (coulter only)*	23/24	31/32
CLEAN UP CREW ONLY	2965-015 (12" solid blade)		
	or 2965-020 (13" notched blade)		
	or 2967-009 Screw Adjust Short UNT for long arms		
	or 2967-015 (13" steel wheel)		
	or 2967-028 Universal unit mounted residue manager		
	or 2967-029 Short U.N.T.	23/24	31/32
	or 2967-045 Narrow row residue manager		
	or 2967-048 Narrow row unit mounted Residue Manager		
	or 2967-049 Screw Adjust Short UNT		
	or 2967-052 Screw Adjust^		
	or 2967-054 Narrow Row Screw Adjust^		
	or 2967-056 Narrow Row Screw Adjust (Long arm)^		
	or 2967-057 Screw Adjust (Long arm)^		
	or 2967-081 (R.M. attachment for JD tool hanger)		
	or 2967-092 L & R Notched disc, for JD tool hanger		
or 2967-094 L & R Notched disc, universal mount			
or 2967-098 Floating narrow row residue manager^			
Residue Manager Combinations	2961-010 Cut-n-Move		
	or 2967-007 U.N.T. Residue Manager Kit		
	or 2967-099 15" UNT residue manager kit		
	or 2967-042 Titan Residue Manager for JD coulter	23/24	31/32
	or 2967-051 (for use with JD 5 bolt unit coulter) 04 to present		
	or 2967-115 (for use with 2960-127 coulter)		
	or 2967-070 (Quick adjust) Optional		
or 2967-150 (for use with JD 5 bolt unit coulter) prior to '04			
Order the long parallel arm option package from planter manufacturer is required			

^ Quantity to order varies depending on which parallel arm "ordering code" the planter is equipped